


- A**
1. MARK 3/4" HOLE ON TOP OF DOOR WITH TEMPLATE. (7/8" TO CENTER AND 2 7/8" FROM EDGE)
 2. BORE 3/4" HOLE, (IN THE CASE OF METAL, FIBERGLASS AND ALUMINUM DOORS PENETRATE THE SKIN AND REMOVE FOAM INSIDE AS NEEDED. IN THE CASE OF A WOOD DOOR BORE DOWN CENTER OF DOOR TO DEPTH OF 5 1/2 INCHES.)



- B**
1. MARK 2 1/8" or 2 1/4" HOLE ON FACE OF DOOR WITH TEMPLATE. (2 3/8" TO CENTER FROM EDGE AND 4 1/2" FROM TOP)
 2. MARK (4) SCREW HOLES WITH TEMPLATE.
 3. BORE 2 1/8" or 2 1/4" HOLE IN FACE OF DOOR. (IN THE CASE OF METAL, FIBERGLASS AND ALUMINUM DOORS PENETRATE THE SKIN AND REMOVE FOAM INSIDE. IN THE CASE OF A WOOD DOOR BORE TO DEPTH OF 1 INCH).

Legend
 Inches → 2 1/8"
 Millimeters → [54.00]

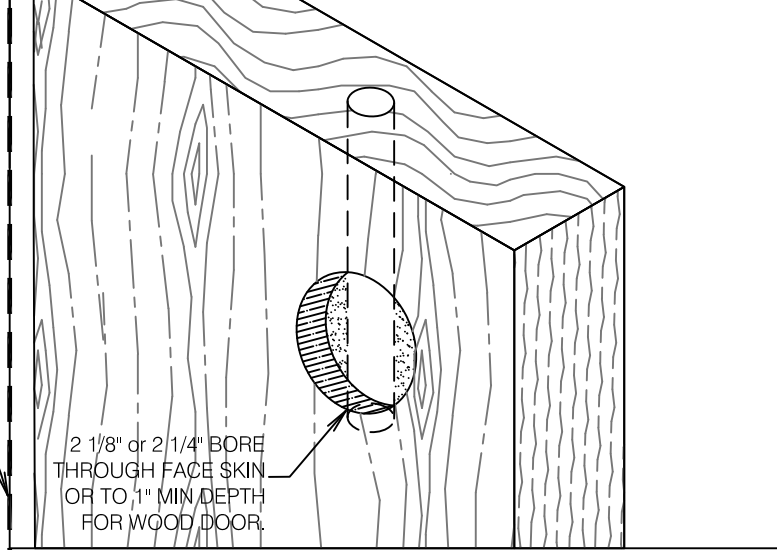

INSTALLATION INSTRUCTIONS

THE "TRI-BOLT" DOOR LOCK

RIGHT SIDE INSTALLATION

